

Tonda PF Chronographe Mystérieux
PF053

 
PARMIGIANI
FLEURIER

 
Tonda PF Chronographe Mystérieux
PF053

3

DISPLAY WITH THE CHRONOGRAPH STOPPED


1. Hours, minutes, seconds

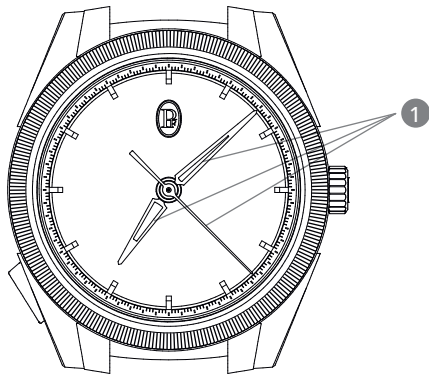

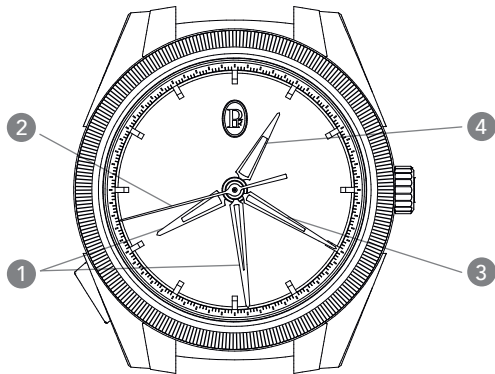

DISPLAY WITH THE CHRONOGRAPH RUNNING

 
1. Hour, minute
2. Chronograph seconds
3. Chronograph minute
4. Chronograph hour

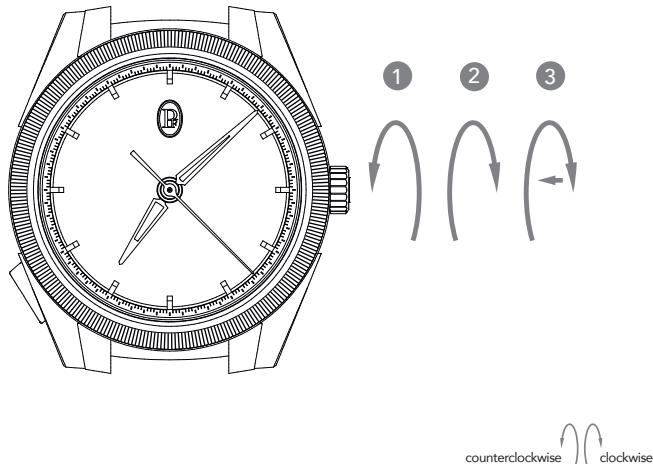

WINDING

Your watch is wound automatically when worn on your wrist. It is important to emphasise that in order to obtain the full power reserve, the watch must be on the wrist for at least twelve hours. This figure may vary according to the type of user. Furthermore, if the movement is completely let down, you will need to turn the crown through about fifteen rotations. This will ensure that the mechanism is properly activated before you put on the watch. Note that the number of crown rotations equating to fully winding a watch varies according to the calibre. The watch can be wound using the crown at any time. If it has stopped, you will need to wind it. To do this:

 1. Unscrew the crown by turning it anti-clockwise until it is released.
2. Turn the crown through a few rotations clockwise to wind your watch.
3. To screw the crown back in, press it against the case while turning it clockwise.

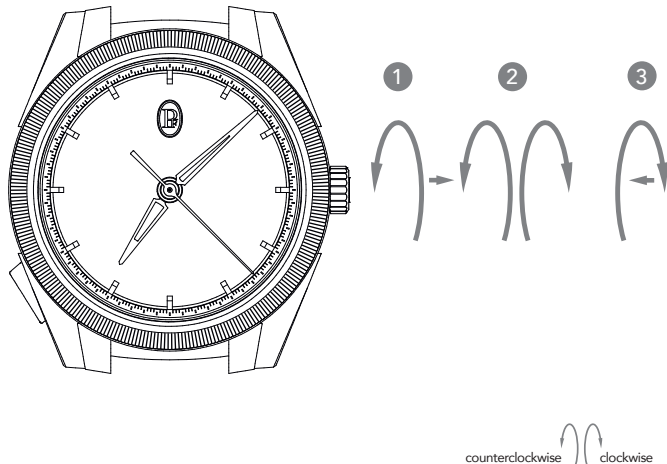


TIME-SETTING

1. Unscrew the crown and pull it out one notch.
2. Turn the crown to set the hands to the desired time.
3. To screw the crown back in, push it back into its initial position and press it against the case.

Notes:

- This correction can be made in either direction.
- When the crown is pulled out, the seconds hand will stop (stop seconds function).
- Time setting is not recommended during timing mode.

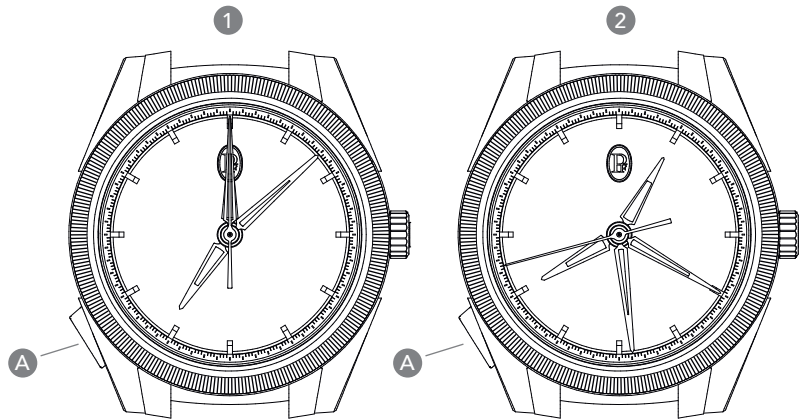

CHRONOGRAPH

1. START

Pressing push-piece A the first time will start the chronograph. The chronograph seconds, hour and minute hands will immediately move to zero, and then start timing.

The main hour and minute hands will continue to indicate the civil time.


NB: while the push-piece is held down, the hands will remain at 12 o'clock. Timing will not start until the push-piece is released.

2. STOP

Pressing push-piece A again will stop the chronograph. The chronograph seconds, hour and minute hands will stop.

Time reading: -1 h - 20 mins – 43 seconds

The main hour and minute hands will continue to indicate the civil time.

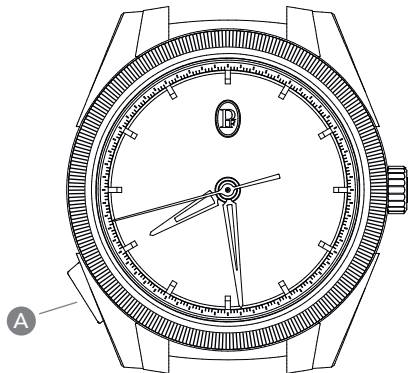

RESET/RETURN TO TIME DISPLAY

Pressing push-piece A another time will make the chronograph disappear. The chronograph seconds, hour and minute hands will reposition themselves on top of the main civil time hour and minute hands.

The seconds hand will resume running from the chronograph stoppage position.

NB: The same hand performs two functions: civil time seconds and chronograph seconds. When the chronograph is activated, it is used as a chronograph seconds, and the main seconds indicator will no longer be available. The hour and minute hands will continue to indicate the civil time throughout the timing operation. After resetting, the seconds hand will resume running from the chronograph stoppage position. To precisely resynchronise the seconds when returning to civil time, use the stop-seconds function (see p.9)

PARMIGIANI.COM

